

# ASTA

## SETTING THE ASTA SPIGOT DIRECTION




**The Asta Spigot** has holes around the top which enable it to be locked into position. Once the umbrella is fitted over the spigot, a pin is pushed all the way through to set the direction the umbrella faces.

This is why it is important to ensure that the spigot is positioned correctly. We recommend putting a stick of screw driver through the spigot pointing the direction that you want the umbrella to face.

**Image 1** show the direction we want the umbrella to face.

**Image 2** shows a plan view of how the umbrella will face when the pin is in. It lines up with a nearby wall.

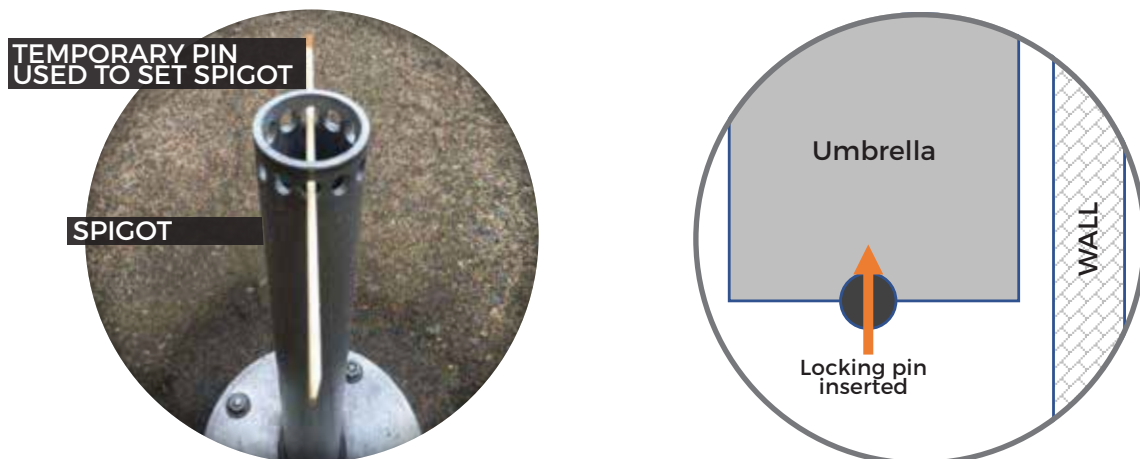

This applies to both bolt down and in ground installations. With an in ground installation we recommend connecting the in ground socket and the spigot before inserting the socket into the concrete. This allows the installer to correctly align the umbrella as well as providing a means of getting the spigot perfectly vertical.

This applies to both Square and Octagonal umbrellas.

FOR FURTHER INFORMATION CONTACT US



**Shade Australia Pty Ltd**

A: 17 Norwich Road Ingleburn NSW 2565

E: [info@shadeaustralia.com.au](mailto:info@shadeaustralia.com.au)

P: 1800 155 233 or 02 9605 5560

W: [shadeaustralia.com.au](http://shadeaustralia.com.au)



# ASTA

## SPIGOT & BASEPLATE DETAIL



\*Require M10 Bolts

FOR FURTHER INFORMATION CONTACT US



**Shade Australia Pty Ltd**

A: 17 Norwich Road Ingleburn NSW 2565

E: [info@shadeaustralia.com.au](mailto:info@shadeaustralia.com.au)

P: 1800 155 233 or 02 9605 5560

W: [shadeaustralia.com.au](http://shadeaustralia.com.au)

