


Deck Mount Kit

Your deck mount kit is going to include:

- Steel spigot tube (black only) suitable for 38-48mm dia. umbrella poles (A)
- Under-deck mount bracket with coach bolts (B)
- Reducer sleeve suitable for different size umbrella poles (C)
- Deck Plate to prevent damage to your decking boards (D)
- Reducer cone to stabilise 38mm umbrellas inside spigot (E)

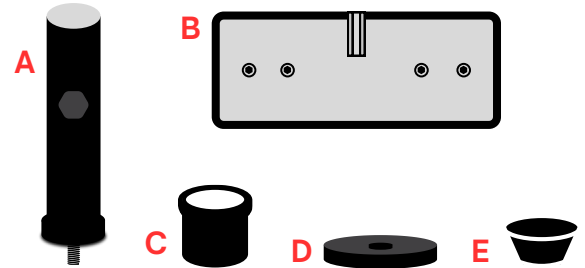


General Installation Instructions


Please note that this product is suitable for umbrella sizes up to 3m Octagonal or 2.5m Square, no larger. It must only be used in light wind conditions and we strongly recommend that the umbrella is collapsed and secured or removed in the event of strong winds or if it is going to be left unattended for long periods of time.

To install the deck mount, you will need to get under the deck to access the deck joists. If you cannot access the underside of the deck, you will need to install this deck mount by lifting one or two decking boards. The mounting bracket is screwed to the decking joists, a hole is drilled for the spigot to fit, and the deck boards are replaced.

Diagrams

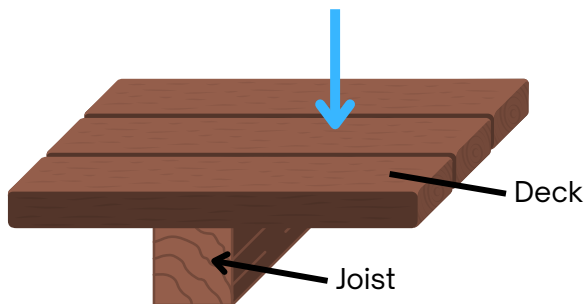

(1). Make sure the Umbrella location is next to a joist (marked by the black arrow). The blue arrow indicates a spot on a deck that would be suitable as it is next to a joist.

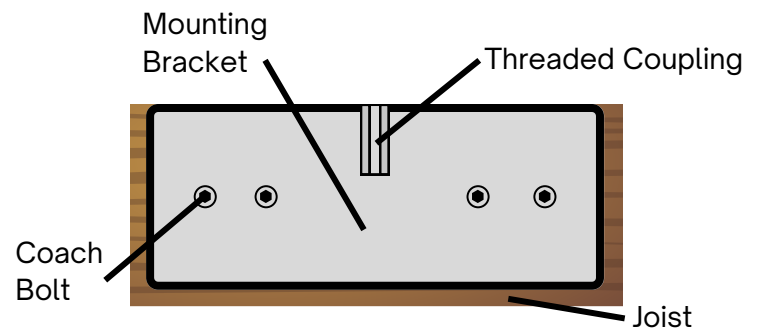

(2). The breakdown of a mounting bracket.



Installation Guide

- 1 Identify a suitable location for installing the Deck Mount. This location needs to be close to an underdeck joist, as the Mounting Bracket will be screwed into the joist in Step 3. A visual diagram of this can be seen above (1).
- 2 Drill a hole through the decking boards at the desired location. This hole must be a minimum of 30mm in diameter. The hole in the deck needs to align with the Threaded Coupling on the Mounting Bracket.
- 3 Using 8mm Coach Bolts, screw the mounting bracket onto the joist. If possible, have the top edge of the Mounting Bracket hard up against the underside of the decking. Some packing materials may be necessary if the decking is slightly uneven to ensure the spigot sits perfectly vertically. Refer to diagram (2).
- 4 Once the Mounting Bracket has been securely screwed to the joist, sit the Deck Plate on the deck and make sure to align the hole in the deck plate with the threaded coupling. Push the long bolt at the base of the spigot through the hole in the deck plate and screw it firmly into the Threaded Coupling on the Mounting Bracket.

The diagram (3) to the right shows this order.

- 5 Loosen the Side Screw on the spigot and place the Reducer Cone into the spigot if your umbrella has a 38mm pole diameter.
- 6 Fit the appropriate sized Reducer Sleeve into the top of the spigot.
- 7 Insert the umbrella into the spigot and tighten the Side Screw until the umbrella is locked in place. The Deck Mount has now been installed!

(3). The deck mount installation order

